




## 1. Mechanical assembly

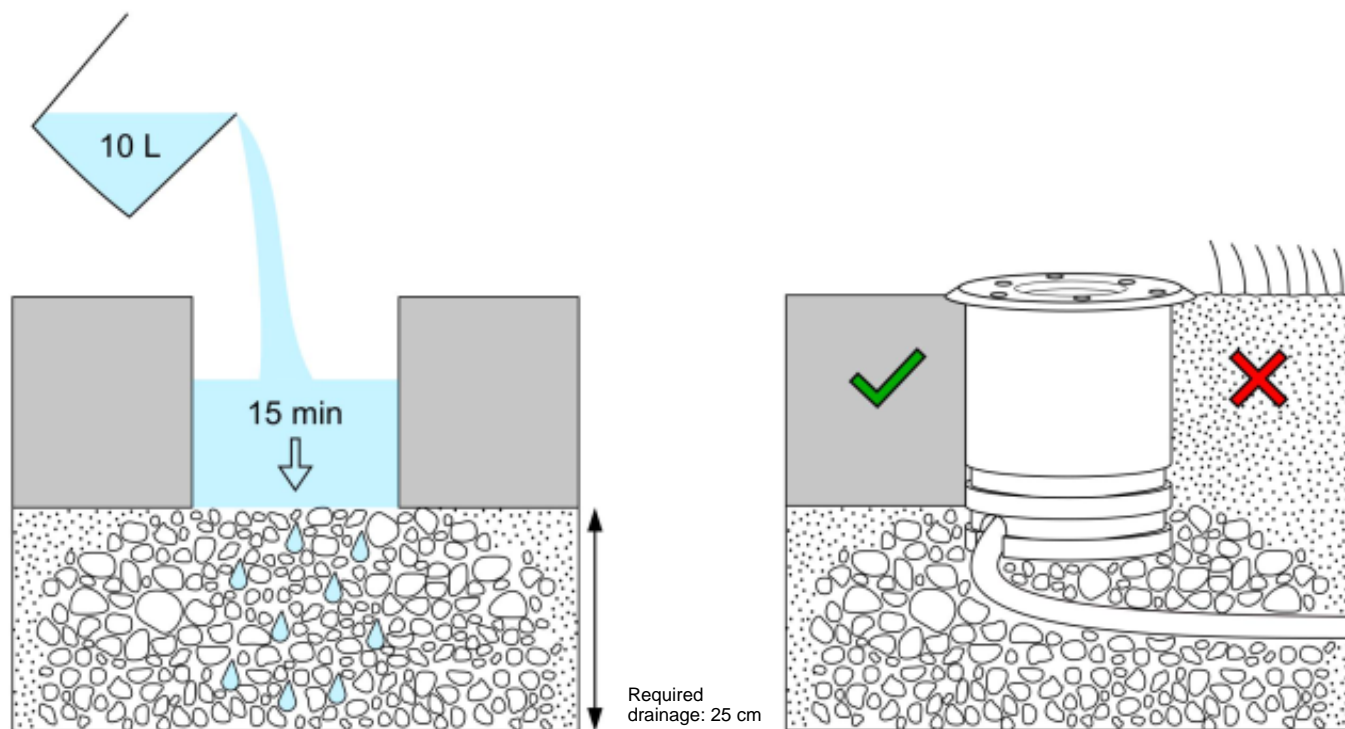

If it is necessary to remove the fixture from the mounting box during installation, only unscrew the screws on the outer flange edge (3 screws for XURO 1 and XURO 3, 4 screws for XURO 12 and XURO 36).

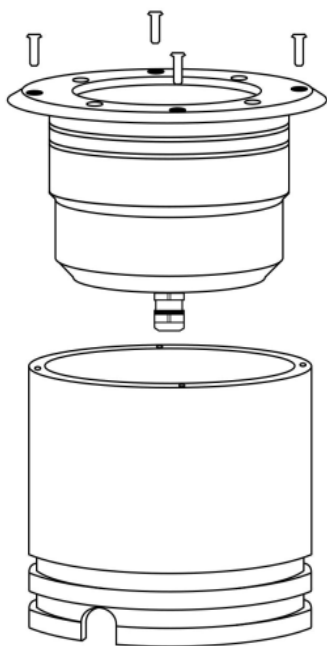

Unscrewing any of the remaining screws on the flange will void the warranty.

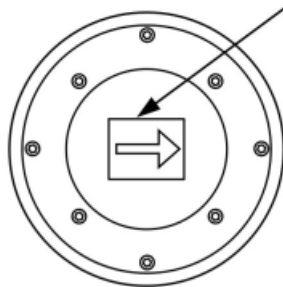


Sticker indicating the installation direction to the illuminated surface (applies to asymmetric distribution), to be removed after installation.



## 2. Electrical connection

**DISCONNECT THE POWER SUPPLY BEFORE CONNECTING THE INSTALLATION!**

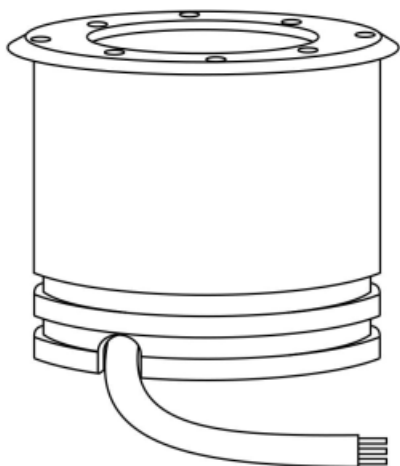

The L, N, PE wires should be properly connected to the power supply wires and the connection should be sealed to prevent flooding, for example: using an IP68 cable gland or an electrical terminal block in an IP box filled with insulating resin.

L - brown  
N - blue  
PE - yellow-green

## 3. Installation, Use, and Cleaning Instructions

The fixture is not intended for loads resulting from the movement of motor vehicles.

A drainage system with the properties specified on page 1 of the manual should be used beneath the fixture.

Do not install the fixture at the junction of two substrate plates.

If shortening the cable, a minimum length of 30 cm should be left to allow for later disassembly of the fixture.


The power supply cable must pass through the hole at the bottom of the box to prevent cable damage.

Once a year, the user should perform a technical inspection of the fixtures, including tightening the screws and cleaning the fixtures by rinsing them to remove excess cleaning agent. During cleaning, avoid using materials that may scratch the surface of the fixture. Washing the fixture with high-pressure water is prohibited.


Avoid exposing the fixture to active chemical substances such as fertilizers, herbicides, or lime.

#### 4. Dimensions


**XURO 1LED**

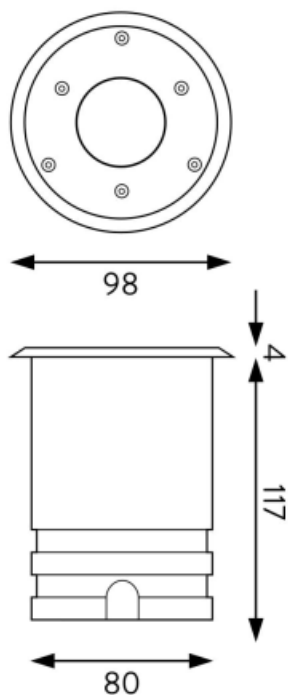

**XURO 3LED**

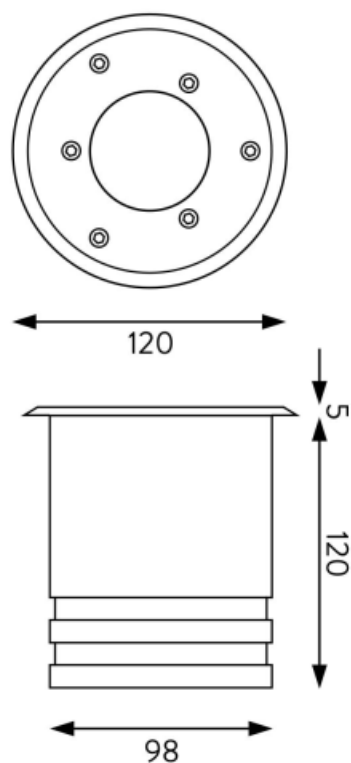

**XURO 12LED**

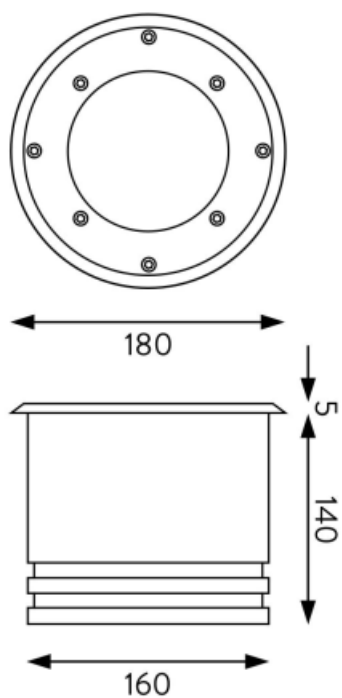

**XURO 36LED**

