



1. Mechanical assembly

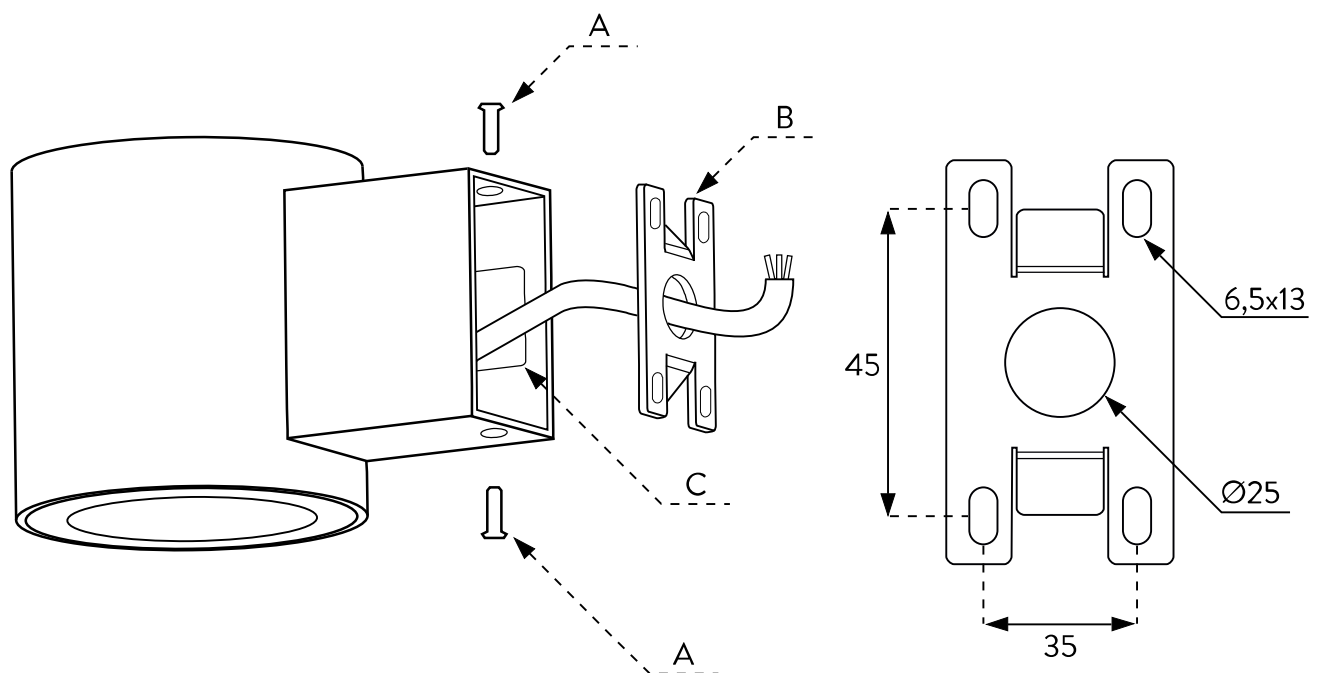

Unscrew screws A and remove bracket B. Check the compatibility of the planned installation with sticker C (light direction up/down). Secure bracket B to the surface using expansion plugs, making sure to pass the power cable through the central hole. Slide the fixture onto bracket B and secure it with screws A.

2. Electrical connection

DISCONNECT THE POWER SUPPLY BEFORE CONNECTING THE INSTALLATION!

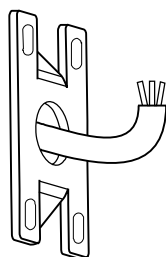

L - brown
N - blue
PE - yellow-green

The L, N, PE wires should be connected properly to the power supply wires, and the connection should be sealed to prevent flooding, for example: using a cable gland, an electrical terminal block in an IP box filled with insulating resin, or through a 3-pole connector with a minimum IP65 rating.



3. Installation, Use, and Cleaning Instructions

The installation of the fixture must be carried out in accordance with national and local regulations regarding electrical installations. The connection of the fixture should be entrusted only to a qualified electrician.

During installation, do not disassemble the fixture or the glands – this may void the warranty. The fixture is factory-sealed during production, and disassembling and reassembling it could compromise its sealing.

The fixture should be connected to a 230V, 50Hz power supply.

Every two years, the user should perform a technical inspection of the fixture, including tightening the screws and cleaning the fixture, focusing on removing dust and other potential debris from the surface of the housing, rinsing the fixture to remove excess cleaning agent.

It is prohibited to wash the fixture with high-pressure water.

During cleaning, avoid using materials that may scratch the surface of the fixture.

Avoid exposing the fixture to active chemical substances.

Do not install the fixture in areas where water may accumulate.

Before manually disassembling the fixture, disconnect the power supply and wait 10 minutes.

Failure to comply with any of the above instructions will result in the loss of the manufacturer's warranty. The manufacturer is not responsible for damage caused by improper installation or use of the product.